


CAY BED FULL/TWIN WITH TWO BUNK DRAWERS

PARTS LIST

- (1)-HEADBOARD
- (1)-FOOTBOARD
- (2)-75" SIDE RAILS
- (2)-BUNK DRAWER UNITS
- (1)-SIDE PANEL
- (4)-SLATS
- (4)-MENDING PLATES
- (6)-2" ANGLE BRACKETS
- (8)-5" LAG BOLT
- (8)-WASHER
- (8)-1-3/4" SCREW
- (40)-3/4" SCREWS

ASSEMBLY INSTRUCTIONS

1. PLACE TWO BUNK DRAWER UNITS ON TOP OF EACH OTHER AS SHOWN BELOW. FLUSH ENDS AND FRONTS. ATTACH (1) MENDING PLATE ON EACH END USING (4) 3/4" SCREWS. ATTACH (2) MENDING PLATES TO BACK OF BUNK DRAWER UNITS TO THE THEM TOGETHER.
2. ASSEMBLE HEADBOARD, FOOTBOARD AND SIDE RAILS AROUND THE BUNK DRAWER ASSEMBLY USING 5" LAG BOLTS AND WASHERS SUPPLIED IN HARDWARE BAG.
3. ATTACH SIDE PANEL TO HEADBOARD AND FOOTBOARD ON OPPOSITE SIDE OF BUNK DRAWER UNIT ASSEMBLY USING (4) ANGLE BRACKETS AND 3/4" SCREWS. ALIGN PANEL FACE WITH FACE OF SIDE RAIL FOR FLUSH FIT.
4. ATTACH (4) SLATS TO SIDE RAIL CLEATS AS SHOWN USING 1-3/4" SCREWS.

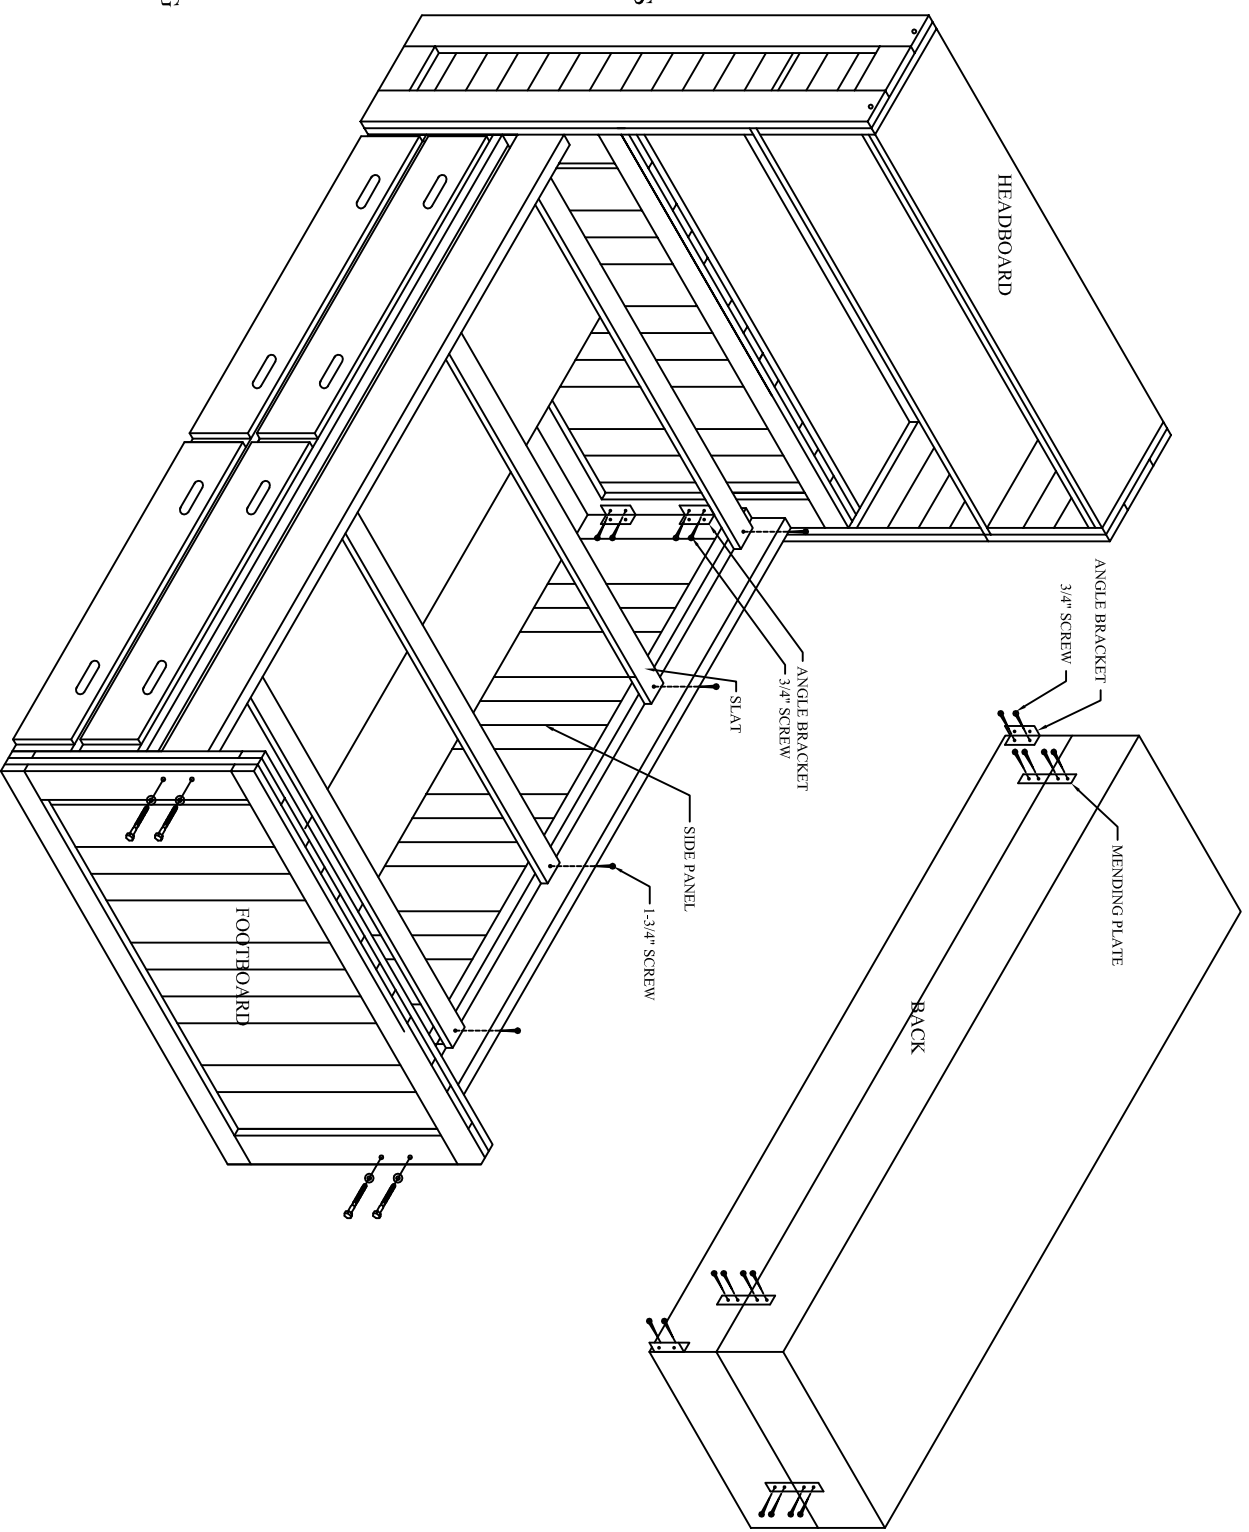

THIS END UP FURNITURE CO.
 P.O. Box 5410 Sanford, North Carolina 27331
 (800) 605-2130 (919) 774-7474 Fax (919) 774-7430 www.thisendup.com