

KING AND QUEEN BED WITH BED DRAWER ASSEMBLY INSTRUCTIONS

TOOLS NEEDED



- 1 - 9/16" SOCKET & RATCHET
- 1 - PHILLIPS HEAD SCREWDRIVER

PARTS LIST


- A - HEADBOARD
- B - FOOTBOARD
- C - 81" SIDE RAILS (2)
- D - WASHER (8)
- E - 5" LAG BOLT (8)
- F - SLATS (4)
- G - 1-3/4" SCREW (8)
- H - BED DRAWER UNIT (1)
- I - ANGLE BRACKET (2)
- J - 3/4" SCREW (8)
- K - LEG SUPPORT (4)
- L - FILLER PANEL (1)
- M - 2" SCREW (2)

ASSEMBLY INSTRUCTIONS


1. Attach headboard (A) to side rails (C) using (4) lag bolts (E). Do not tighten lag bolts completely.
2. Attach footboard (B) in the same way.
3. Tighten all (8) lag bolts.
4. Screw leg supports (K) into t-nuts located in the center of slats (F). Hand tighten. See Detail A.
4. Place (4) slats (F), evenly spaced, on top of cleat between side rails. Place first two slats at the ends of each side rail close to headboard and footboard. Space remaining two out evenly between each end. Secure using (8) screws (G).
5. Adjust each leveler on bottom of leg support so that they touch the floor.
6. Attach (1) angle bracket (I) to headboard 1-3/4" from edge of headboard as shown in Detail B.
7. Attach filler panel (L) to headboard end of bed drawer unit using (2) 2" screws. Flush face of filler panel with front of bed drawer unit.
8. Slide Bed Drawer Unit under side rail. Flush the drawer face with the face of the side rail. Secure unit to bed with one angle bracket at back of bed drawer unit on the end that is touching the footboard. See Detail C. Secure opposite end to bracket that was attached earlier to the headboard. The bracket should attach to back side of filler panel.

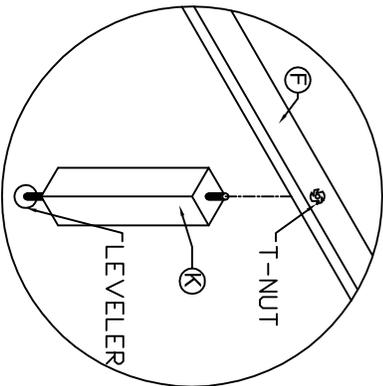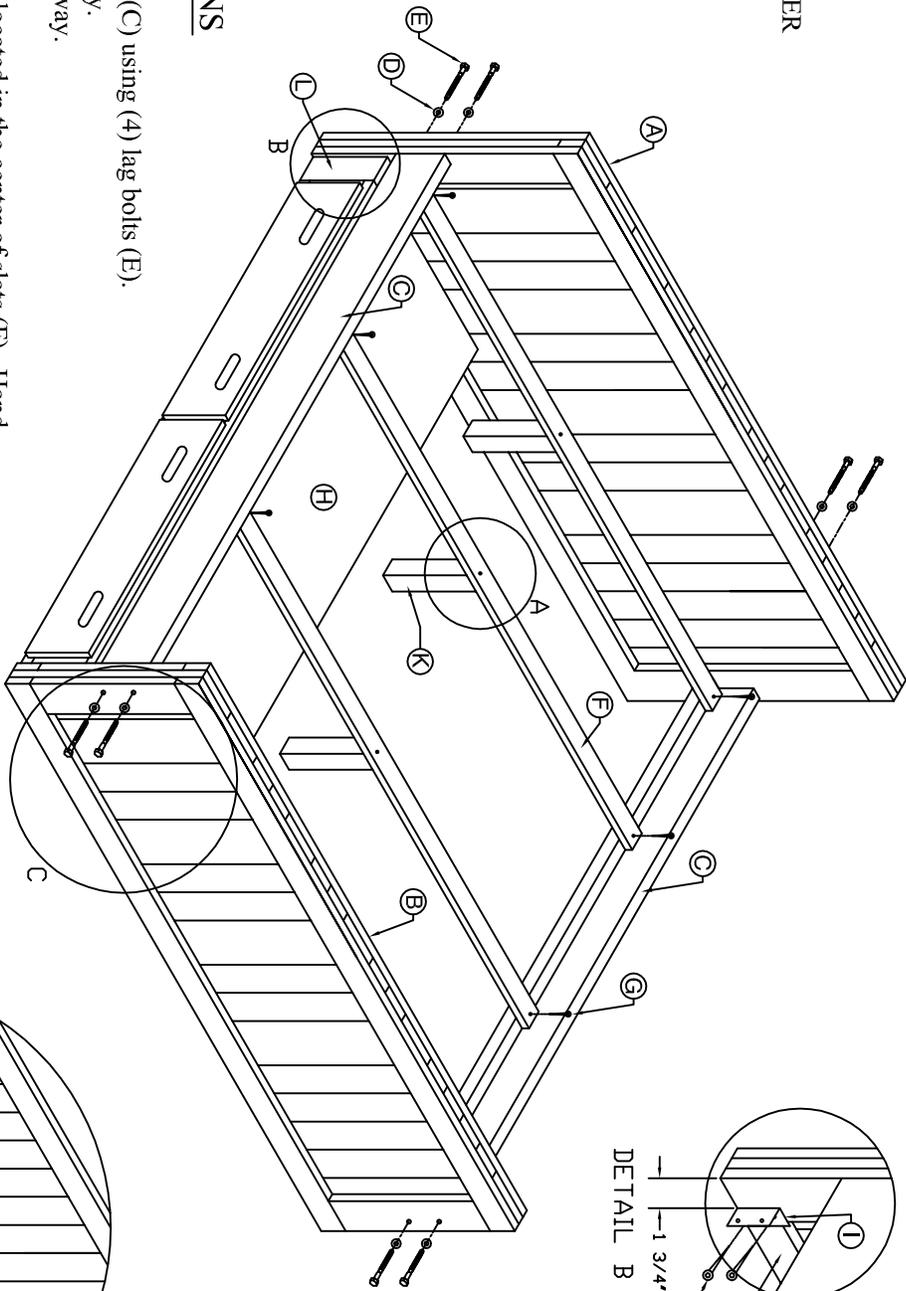

DETAIL A

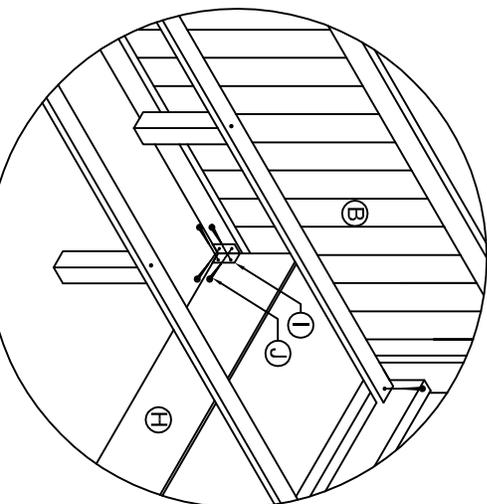

DETAIL C

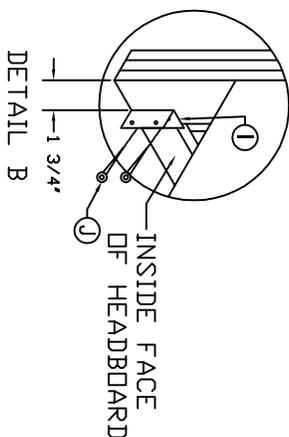

DETAIL B

THIS END UP FURNITURE CO.

P.O. Box 5410 Sanford, North Carolina 27331

(800) 605-2130 (919) 774-7474 Fax (919) 774-7430 www.thisendup.com