



STUDY CARREL ASSEMBLY INSTRUCTIONS

TOOLS NEEDED:

- 2 - MENDING PLATES
- 8 - 1" WOOD SCREW
- PHILLIPS HEAD SCREWDRIVER

INSTRUCTIONS

1. PLACE STUDY CARREL AT THE BACK EDGE OF THE STUDENT DESK TOP WHILE CENTERING THE UNIT FROM LEFT TO RIGHT.
2. ATTACH ONE MENDING PLATE ON THE BACK EDGE OF STUDY CARREL END PANEL. THE MIDDLE OF THE MENDING PLATE SHOULD BE PLACED AT THE BOTTOM EDGE OF THE END PANEL AS SHOWN IN THE DETAIL. SECURE USING TWO 1" SCREWS.
3. REPEAT STEP 2 FOR OTHER END PANEL OF STUDY CARREL.
4. SECURE UNIT TO BACK OF BOTTOM UNIT USING FOUR 1" SCREWS AS SHOWN IN DETAIL.

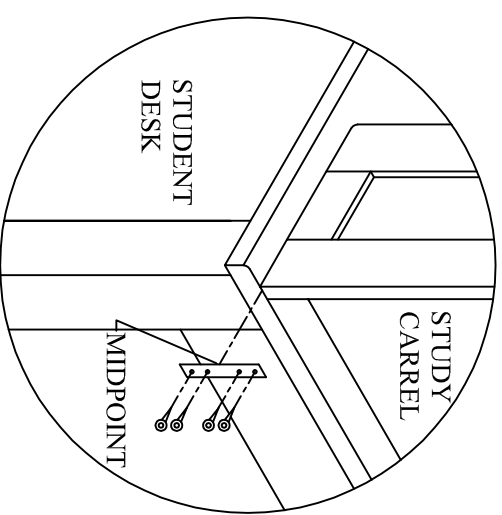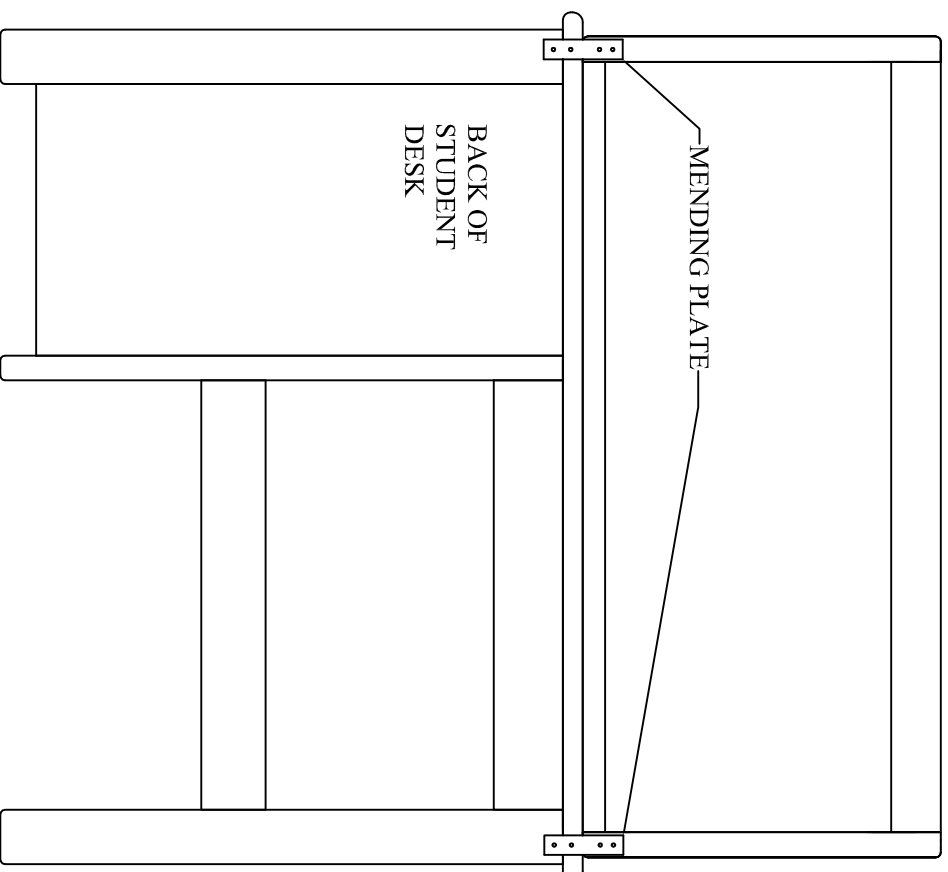

THIS END UP FURNITURE CO.

P.O. Box 5410 Sanford, North Carolina 27331

(800) 605-2130

(919) 774-7474

Fax (919) 774-7430

www.thisendup.com